



NOTE  
 \* = VARIABLE  
 # = MASSIVE GND = PC BOARD GND

\*TRANSFORMER TERMINATION INFORMATION BOTTOM VIEW



TRANSISTOR BASE INFORMATION E EMITTER C COLLECTOR B BASE



Lw zender/ontvanger bevat de volgende  
door de P.T.T. toegestane kanalen en frek-  
wenties:

<b>Kanaal</b>	<b>Frekwentie in MHz</b>
1	26.965
2	26.975
3	26.985
4	27.005
5	27.015
6	27.025
7	27.035
8	27.055
9	27.065
10	27.075
11	27.085
12	27.105
13	27.115
14	27.125
15	27.135
16	27.155
17	27.165
18	27.175
19	27.185
20	27.205
21	27.215
22	27.225