

**INTEK**<sup>®</sup>

**HR-200S**

AMATEUR RADIO  
MOBILE TRANSCEIVER  
144-146 MHz VHF FM 60W  
PC PROGRAMMABLE

**HR-400S**

AMATEUR RADIO  
MOBILE TRANSCEIVER  
430-440 MHz UHF FM 45W  
PC PROGRAMMABLE



OWNER'S MANUAL

## **Notice**

### **NOTICE !**

It is recommended to carefully read this owner's manual before using the product. This will also help the user to prevent using the radio in violation of the regulations valid in the country where the product is used, as well as to avoid any possible interferences with other services.

### **NOTICE !**

This transceiver has been factory programmed, in order to use the product immediately after purchase. The programming includes the activation of channels/frequencies in the VHF and UHF FM Amateur Bands, according to the technical rules in force for the use of this bands.

### **NOTICE !**

This transceiver is programmable via PC, using the dedicated software and the PC interface cable (optional items). Any programming or modification of the original default setting must be made by a specialised technician or by an authorised service centre. Some functions of this transceiver might be programmed in violation of the technical rules in force for the use of the VHF and UHF FM bands. It is the user's responsibility to check that any modification to the programming will be done in compliance with the current regulations. Any modification to the product, alteration of the internal circuit, of the external structure of the radio or any programming in violation of the current regulations will automatically void the product certification and your right to use the product. INTEK S.R.L. declines any responsibility concerning any modification of the product, made by the user or by a third party, after delivery of the product.

**CE 0678** 



**RoHS**  
2002/95/EC

## ***General Information***

### **Thank you !**

Thank you for choosing INTEK for your amateur radio applications. This user friendly transceiver will provide you with clear and reliable communications and will keep your professional activities at peak efficiency. This transceiver incorporates the latest and most advanced technology, so you will be pleased with its quality and its technical features.

### **Important notice !**

The use of VHF and UHF FM transceivers is subject to the regulations applied in the country where the product has to be used. As regulations are usually subject to possible modifications, please check the current regulations in your country with your dealer or local supplier. INTEK does not take any responsibility for illegal use and operation of this product not in accordance with the regulation of the country where the product is used.

### **Safety notice**

The user must know and understand the common risks related to the use of transceivers. Do not use the transceiver in environments at risk of explosion (where there are gas, dusts, smokes, etc.). Do not use the transceiver in service areas or fuel stations, on board aircrafts, etc.

### **Cautions**

Please observe the following precautions, in order to avoid causing fire, personal injuries or damage to the radio:

- It is suggested that each transmitted message lasts a few minutes only, since very long transmissions at the maximum transmitter RF output power may overheat the transmitter.
- Do not alter or modify in any way your transceiver.
- Do not expose the transceiver for a long time to direct sunlight and do not place it close to heat sources.
- Do not expose the transceiver to excessively dusty or damp places, do not place it on unstable surfaces.
- In case of anomalous smell or smoke that leaks out from the transceiver, turn it off immediately. Please contact an authorised service center.

## ***General Information***

- Please observe the following precautions to prevent fire, personal injury, or transceiver damage:
- Do not attempt to configure your transceiver while driving, it is dangerous.
- This transceiver is designed for a 13.8V DC power supply. Don't use a 24V battery to power on the transceiver.
- Do not place the transceiver in excessively dusty, humid or wet areas, nor unstable surfaces.
- Please keep it away from interferential devices (such as TV, generator etc.)
- Do not expose the transceiver to long periods of direct sunlight nor place it close to heating appliances.
- If an abnormal odor or smoke is detected coming from the transceiver, turn OFF the power immediately. Contact a service station or your dealer.
- Do not transmit with high output power for extended periods; the transceiver may overheat

### **Important notice !**

The use of VHF and UHF FM transceivers is subject to the regulations applied in the country where the product has to be used. As regulations are usually subject to possible modifications, please check the current regulations in your country with your dealer or local supplier. INTEK does not take any responsibility for illegal use and operation of this product not in accordance with the regulation of the country where the product is used.

### **User Information**

in accordance with art. 13 of the Legislative Decree of 25th July 2005, no. 15 "Implementation of Directives 2002/95/EC, 2002/96/EC and 2003/108/EC, relative to reduction of the use of hazardous substances in electrical and electronic equipment, in addition to waste disposal".



The crossed bin symbol shown on the equipment indicates that at the end of its working life the product must be collected separately from other waste.

The user must therefore take the above equipment to the appropriate differentiated collection centres for electronic and electro technical waste, or return it to the dealer when purchasing a new appliance of equivalent type, in a ratio of one to one.

Appropriate differentiated waste collection for subsequent recycling, treatment and environment-friendly disposal of the discarded equipment helps to prevent possible negative environmental and health effects and encourages recycling of the component materials of the equipment.

Illegal disposal of the product by the user will be punished by application of the administrative fines provided for by the legislative decree no. 22/1997 (article 50 and following of the legislative decree no. 22/1997).

---

# CONTENTS

---

<b>New and Innovative Features .....</b>	1	Transmitting Optional Signaling .....	13
<b>Supplied Accessories/Optional Accessories .....</b>	2	Channel Edit .....	13
Supplied Accessories .....	2	Channel Delete .....	13
Optional Accessories .....	2	<b>Shortcut Operations.....</b>	14
<b>Initial Installation .....</b>	3	Squelch Off/Squelch Off Momentary.....	14
Mobile Installation .....	3	Squelch Level Setup .....	14
DC Power Cable Connection .....	4	Frequency/Channel Scan .....	14
Power Supply Voltage Display .....	6	Channel Scan .....	14
Antenna Connection .....	6	CTCSS/DCS Encode and Decode Setup .....	14
Accessories Connections.....	7	CTCSS Scan.....	15
<b>Getting Acquainted .....</b>	8	DCS Scan .....	15
Front panel.....	8	High/Mid/Low Power Switch .....	15
Rear panel .....	9	Comander (Decrease the background noise and enhance audio clarity .....	15
Display .....	9	Offset Direction and Offset Frequency Setup .....	16
Microphone .....	10	Keypad Lockout .....	16
<b>Working Mode .....</b>	11	Current Voltage Enquiry.....	16
<b>Basic Operations .....</b>	12	Auto-Dialer Setup.....	16
Switching the Power On/Off .....	12	Transmitting Edited DTMF Tones in the Auto-dialer Memory.....	17
Adjusting the Volume .....	12	<b>General Setting.....</b>	18
Switch between VFO and Channel mode .....	12	Frequency Channel Step Setup.....	18
Adjusting Frequency/Channel Through Selector Knob.....	12	DTMF, DTMF ANI, 2Tone or 5Tone Signaling .....	18
Receiving .....	12	Sending 2-Tone Call.....	19
Transmitting .....	12	Sending 5-Tone Call.....	19
Transmitting Tone-Pulse .....	13	Sending DTMF call .....	19
		Signaling Combination Setup.....	19

---

# CONTENTS

HIGH/MID/LOW Power Selection .....	20	Squelch Level .....	27
Band-width Selection .....	20	Optional Signaling .....	27
TX OFF Setup .....	21	Scan Skip .....	28
Busy Channel Lockout .....	21	Frequency/Channel Scan .....	28
Editing Channel Name .....	21	Busy Channel Lockout .....	28
Reverse TX/RX .....	21	Reverse TX/RX .....	28
Talk Around .....	22	TOT (Time-out timer) .....	29
Voice Comander .....	22	CTCSS/DCS Encode and Decode .....	29
Scrambler Setup (Encryption) .....	22	Talk Around .....	29
Radio's DTMF SELF ID ENQUIRY .....	22	Voice Prompt .....	29
Radio's 5TONE SELF ID ENQUIRY .....	23	HIGH/MID/LOW Power Selection .....	29
Voice Prompt .....	23	LCD Backlight .....	30
TOT (Time-out timer) .....	23	<b>Programming Software Installing and Starting (in windows XP system)</b> .....	31
APO (Auto power off) .....	23	<b>Maintenance</b> .....	32
DTMF Transmitting Time .....	24	Default Setting after Resetting (VHF) .....	32
Squelch Level Setup .....	24	Default Setting after Resetting (UHF) .....	32
Scan Dwell Time Setup .....	24	Trouble Shooting .....	32
LCD Backlight .....	24	<b>Specifications</b> .....	33
Pilot Frequency .....	25	<b>Attached Chart</b> .....	34
Display Mode Setup .....	25	50 groups CTCSS Tone Frequency(Hz) .....	34
PIN Setup .....	25	1024 groups DCS Code .....	34
Address List .....	26	<b>Declarations of Conformity</b> .....	36
Factory Default .....	26	Declaration of Conformity HR-200S .....	36
<b>Microphone Operation</b> .....	27	Declaration of Conformity HR-400S .....	36
Function Setup By Microphone Keypad .....	27	<b>Notes</b> .....	37


 
 
INTEK Mobile Radios has nice housing, stoutness & stability, advanced and reliable functions, perfect & valuable. This amateur mobile radio especially designs for drivers and it pursues company philosophy of innovation and practicality. More functions as follows:

- ▼ Display on a large LCD with adjustable brightness, convenient for nighttime use. There are Amateur operation mode and Professional operation mode for option.
- ▼ Distribute buttons reasonably, convenient for operation. Adopt superior quality material, better technology and high quality radiator to ensure stable and durable operation.
- ▼ 200 programmable memorized channels, identified by editing name.
- ▼ Programming different CTCSS, DCS, 2Tone, 5Tone in per channel, rejecting extra calling from other radios.
- ▼ Various scan functions including CTCSS/DCS Scan function.
- ▼ Using 5Tone to send Message, Emergency alarm, Call all, ANI, Remotely kill, Remotely Waken, etc.
- ▼ Automatic calling Identification function by DTMF--ANI or 5Tone--ANI .
- ▼ Scramble function (Optional).
- ▼ Compander function for decrease the background noise and enhance audio clarity, it can set compander ON/OFF per channel.
- ▼ Different band width per channel, 25K for wide band, 20K for middle band ,or 12.5K for narrow band.
- ▼ Theft alarm provides extra safety.

## Supplied Accessories/Optional Accessories

### ■ Supplied Accessories

After carefully unpacking the transceiver, identify the items listed in the table below. We suggest you keep the box and packaging.

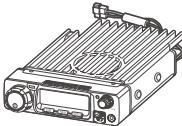- |   |   |   |  |   |
|---|---|---|--|---|
| • Transceiver   | • Microphone<br>(with DTMF keyboard)  | • Mobile Mounting<br>Bracket  | • DC Power Cable with<br>Fuse Holder   | • Hardware Kit for Bracket  |
|  |  |  |  | <br>Black screws (M4X8mm 4PCS)<br><br>Tapping screws (M5X8mm 4PCS)<br> |
| • Spare Fuses   | • User Manual   |   |  |   |
|  |  |   |  |   |

2

### ■ Optional Accessories




- |                                    |  |   |
|------------------------------------|--|---|
| • USB Programming<br>Cable (D-200) | • Regulated Power<br>Supply (SPA-8230) | • External Speaker<br>(FSP-10 / FSP-20 / FSP-30 / FSP-50) |
|------------------------------------|--|---|



## ■ Mobile installation

To install the transceiver, select a safe, convenient location inside your vehicle that minimizes danger to your passengers and yourself while the vehicle is in motion. Consider installing the unit at an appropriate position so that knees or legs will not strike it during sudden braking of your vehicle. Try to pick a well ventilated location that is shielded from direct sunlight.

1. Install the mounting bracket in the vehicle using the supplied self-tapping screws (4pcs) and flat washers (4pcs).

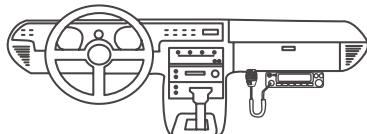
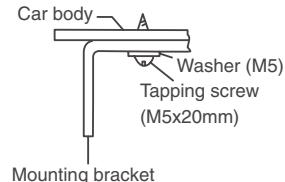
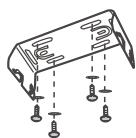


2. Position the transceiver, then insert and tighten the supplied hexagon SEMS screws.

- ▼ Double check that all screws are tightened to prevent vehicle vibration from loosening the bracket or transceiver.



  - ▼ Determine the appropriate angle of the transceiver, using the 3 screw hole positions on the side of the mounting bracket.

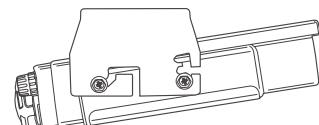

## ■ DC Power Cable Connection



Locate the power input connector as close to the transceiver as possible.

### ✖ Mobile Operation

The vehicle battery must have a nominal rating of 12V. Never connect the transceiver to a 24V battery. Be sure to use a 12V vehicle battery that has sufficient current capacity. If the current to the transceiver is insufficient, the display may darken during transmission, or transmitting output power may drop excessively.

1. Route the DC power cable supplied with the transceiver directly to the vehicle's battery terminals using the shortest path from the transceiver.

- ▼ We recommend you do not use the cigarette lighter socket as some cigarette lighter sockets introduce an unacceptable voltage drop.
- ▼ The entire length of the cable must be dressed so it is isolated from heat, moisture, and the engine secondary (high voltage) ignition system/ cables.


2. After installing cable, in order to avoid the risk of damp, please use heat-resistant tape to tie together with fuse box. Don't forget to reinforce whole cable.

3. In order to avoid the risk of short circuit, please cut down connection with negative (-) of battery, then connect with radio.

4. Confirm the correct polarity of the connections, then attach the power cable to the battery terminals; red connects to the positive (+) terminal and black connects to the negative (-) terminal.


- ▼ Use the full length of the cable without cutting off excess even if the cable is longer than required. In particular, never remove the fuse holders from the cable.

5. Reconnect any wiring removed from the negative terminal.

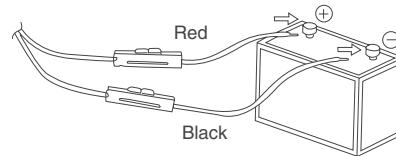

6. Connect the DC power cable to the transceiver's power supply connector.

- ▼ Press the connectors firmly together until the locking tab clicks.

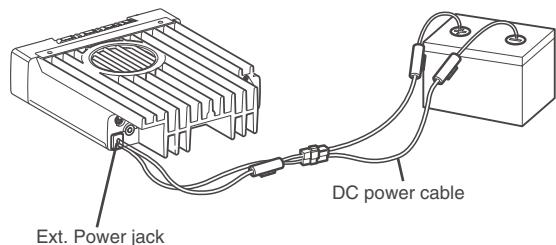

## ☒ Fixed Station Operation

In order to use this transceiver for fixed station operation, you will need a separate 13.8V DC power supply (not included), power supply (SPA-8230) as optional accessories. Please contact local dealer to require.

The recommended current capacity of your power supply is 12A.


1. Connect the DC power cable to the regulated DC power supply and ensure that the polarities are correct. (Red: positive, Black: negative).

- ▼ Do not directly connect the transceiver to an AC outlet.
- ▼ Use the supplied DC power cable to connect the transceiver to a regulated power supply.
- ▼ Do not substitute a cable with smaller gauge wires.



Regulated power supply (SPA-8230)

Regulated Power Supply  
(SPA-8230)

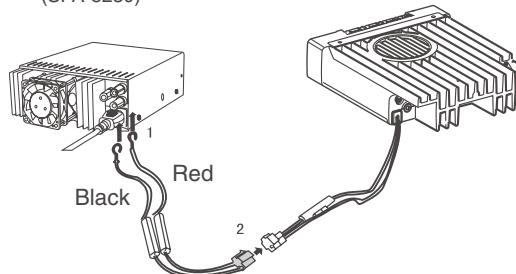

DC power cable with fuse holder

2. Connect the transceiver's DC power connector to the connector on the DC power cable.


- ▼ Press the connectors firmly together until the locking tab clicks.



- ▼ Before connecting the DC power to the transceiver, be sure to switch the transceiver and the DC power supply OFF.
- ▼ Do not plug the DC power supply into an AC outlet until you make all connections.

### Replacing Fuses

 If the fuse blows, determine the cause, then correct the problem. After the problem is resolved, replace the fuse. If newly installed fuses continue to blow, disconnect the power cable and contact your authorized dealer or an authorized service center for assistance.



Fuse Location	Fuse Current Rating
Transceiver	15A
Supplied Accessory DC power cable	20A

6

Only use fuses of the specified type and rating, otherwise the transceiver could be damaged.

**NOTE** If you use the transceiver for a long period when the vehicle battery is not fully charged, or when the engine is OFF, the battery may become discharged, and will not have sufficient reserves to start the vehicle. Avoid using the transceiver in these conditions.

### Power supply voltage Display

After connecting the transceiver to the power supply, the supply voltage can be displayed on LCD by pressing the **[F1]** key together with the **[SQL]** key.

The display immediately changes as the voltage supply changes. It also displays voltage during transmission.

The transceiver will return to its normal operation when the power is switched ON or repeat above operation.



The range of displayed voltage is only from 7V to 16V DC, because the displayed value is estimated, please use a voltmeter when a more precise reading is desired.

### Antenna Connection

Before operating, install an efficient, well-tuned antenna. The success of your installation will depend largely on the type of antenna and its correct installation. The transceiver can give excellent results if the antenna system and its installation are given careful attention.

Use a  $50\Omega$  impedance antenna and low-loss coaxial feed-line that has a characteristic impedance of  $50 \Omega$ , to match the transceiver input impedance. Coupling the antenna to the transceiver via feed-lines having an impedance other than  $50\Omega$  reduces the efficiency of the antenna system and can cause interference to nearby broadcast television receivers, radio receivers, and other electronic equipment.

**NOTE** Transmitting without first connecting an antenna or other matched load may damage the transceiver. Always connect the antenna to the transceiver before transmitting.

All fixed stations should be equipped with a lightning arrester to reduce the risk of fire, electric shock, and transceiver damage.


The possible locations of antenna on a car are shown as following:




## ■ Accessories Connections

### ☒ External Speaker

If you plan to use an external speaker, choose a speaker with an impedance of 8 Ohm. The external speaker jack accepts a 3.5 mm mono (2-conductor) plug.

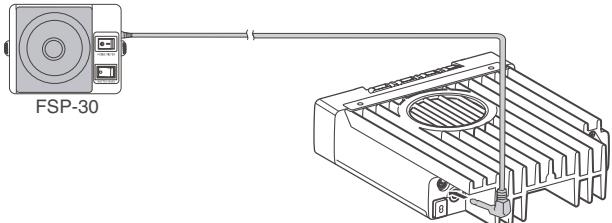


**NOTE** External speaker adopt double port BTL, please care about the connecting way. The speaker can not connect with the ground, otherwise the speaker will be fault. The wrong connecting way as the following picture.

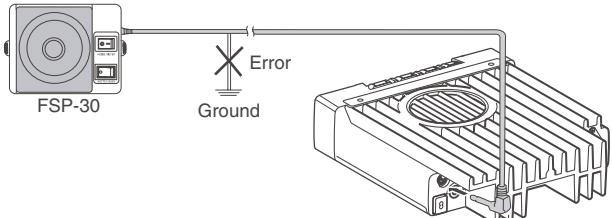

### ☒ Microphone

For voice communications, connect a microphone equipped with an 8-pin modular plug into the modular socket on the front of the main unit. Press firmly on the plug until the locking tab clicks. Attach the supplied microphone hanger in an appropriate location using the screws included in the screw set.

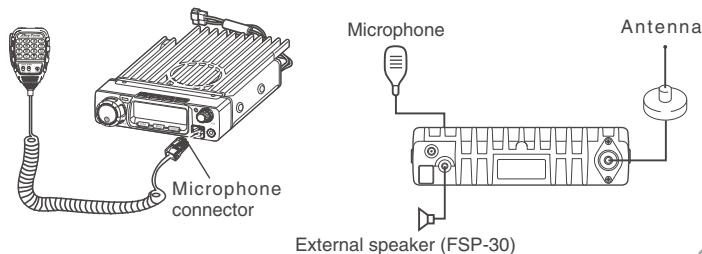


### ☒ PC Connecting

To utilize the software (free download), you must first connect the transceiver to your PC then using the optional programming cable (via Data socket).

Please use the free software for programming.

[www.intek-radios.com](http://www.intek-radios.com)

**NOTE** Ask your dealer about purchasing the optional Programming Cable.

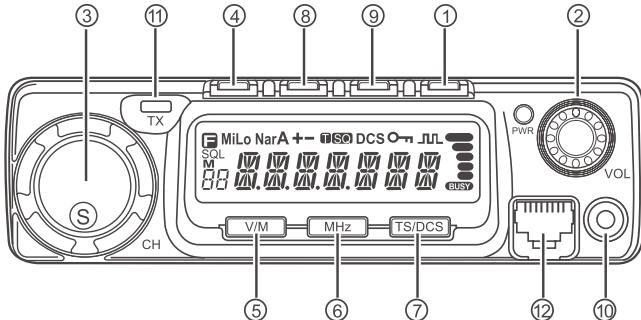**Front Panel****• Basic Functions**

NO.	KEY	FUNCTION
1	Pow(Power)	Power on/Off
2	VOL	Adjust Volume Key
3	Main Dial	Change frequency, memory channel and scan direction etc.
4	FUN/SET	Function Key
5	V/M/MW	Switches between VFO mode and Channel mode
6	MHz/SHIFT	Step Size Key ( step:1MHz)
7	TS/DCS/LOCK	Sets CTCSS and DCS value
8	CAL/H/L	Call key
9	SQL/D	Squelch off
10	Data Terminal	Data reading/writing, cloning and theft alarm functions
11	TX	lights during Transmitting
12	Mic.connector	Microphone connection port

• Press **FUN** key until **F** icon appears then press the following key.

NO.	KEY	FUNCTION
4	FUN/SET	Confirms the selective functions and exit
5	V/M/MW	Stores data into channels
6	MHz/SHIFT	Sets offset direction and offset frequency
7	TS/DCS/LOCK	Sets Keypad lock function
8	CAL H/L	Switches between HI, MID and LOW power transmission
9	SQL/D	Comander mode on/off


• Press **FUN** key and following key together to activate following function:

NO.	KEY	FUNCTION
1	PWR	Reset to factory default settings
5	V/M/MW	Erase the memory
6	MHz/SHIFT	Switches between Wide/ Narrow band
7	TS/DCS/LOCK	Auto dialer
8	CAL/H/L	Enters clone data function mode
9	SQL/D	Enters power supply voltage indication mode

• Functions that require continuous pressing following key to be activated


NO.	KEY	FUNCTION
4	FUN/SET	Press and hold for 2s to enter the Setting mode
9	SQL/D	Monitor mode

## Rear Panel

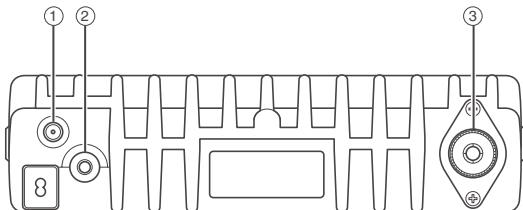


NO.	KEY	FUNCTION
1	Ext. Power Jack	Terminal for connecting an optional cable for use with ignition key On/Off function. The radio will auto power on when car is driving. The radio will auto power off when car stops.
2	Ext.Speaker Terminal	Terminal for optional external speaker mod. FSP-30
3	Antenna Connector	Connection for 50Ω coaxial cable and antenna.

## Display LCD

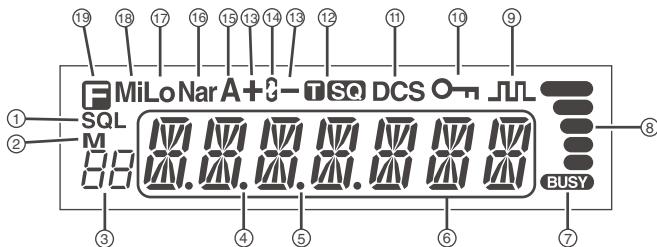


NO.	KEY	FUNCTION
1	SQL	Squelch level.
2	M	In channel mode.
3	88	Indicates the channel number in channel mode.
4	Decimal point	Channel skip.
5	Decimal point	Indicates the decimal point of frequency and the scanning function.
6	00000000	Indicates the frequency or memory name.
7	BUSY	Signal is being received or monitor.
8		Signal strength of receiving and transmitting.
9		Compander.
10		Keypad lock .
11	DCS	Set DCS function.
12		Set CTCSS function.
13	+ -	Offset frequency direction.
14		Scramble.
15	A	Auto power off.
16	Nar	Narrow band.
17	LO	Low power.
18	Mi	Middle Power.
19		Pressing  key.

### ■ Microphone

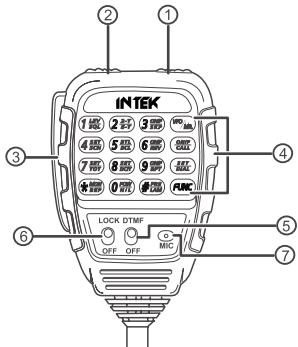

MIC Connector Diagram(in the front view of connector)

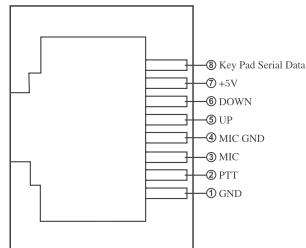

NO.	KEY	FUNCTION
10	1 UP	Increase frequency ,channel number or setting value.
2	DOWN	Decrease frequency, channel number or setting value.
3	PTT	Press the PTT (Push-TO-Talk) key to transmit.
4	Number Key	Input VFO frequency or DTMF dial out etc..
5	DTMF ON/OFF	Switches between DTMF dialing or function operating.
6	LOCK Switch	Locks out the UP 、 Down、 Numerical keys and Function keys.
7	MIC	Speak here during transmission.

## WORKING MODE (AMATEUR TRANSCEIVER OR PROFESSIONAL TRANSCEIVER)

According to practical application,you can set the radio works as Amateur Transceiver mode or Professional Transceiver mode . There are also 2 levels operation menu to set functions as you need. It is easy and convenient (From No.1 to No. 15 are channel function setup,From No.15 to No.29 are general setting setup).

 
### 1. Working Mode:

**A. By programming software:**In PC software's "General Setting"menu ,choose "Display Mode" to select Amateur Transceiver mode or Professional Transceiver mode.

**B. By manual setup:**Please refer to "Display Mode" in Page 24.

**2. Amateur Transceiver Mode:**Except setting as "CH" mode, others considered as Amateur transceiver mode. Under this mode,press **V/M** key to switch between Channel mode and VFO mode .

**A. Frequency + Channel mode:** When set display as "FR",it enters into Frequency+Channel mode, new setting of channel operation and shortcut operation can be temporarily used by user. Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.(As pic 1)



(Pic 1)


**B. Channel+Name Tag Mode:** When set display as "NM",it enters into Channel +Name Tag mode. At this mode, it will display corresponding channel name when the current channel is edited with name. Otherwise, it will display frequency + channel. Its operations are the same as frequency + channel mode.(As pic 2)



(Pic 2)

### C. VFO Mode(Frequency mode):

 This mode shows only frequency on the display. Shortcut operation and Channel setting will be changed & stored as the latest value permanently.Once the radio is turned off or changed to new VFO frequency, the latest setting is remained until next change.(As pic 3)



(Pic 3)

**3. Professional Transceiver Mode:**When set display mode as "CH",it enters into Professional Transceiver mode.At this mode,except scan,other shortcut operation can't operate.And from No.1-17 menu in function setting will be auto-hidden,They should be set by PC software.If there is corresponding name for current channel,the LCD will display current channel name Otherwise,it shows current channel number. (As pic 4) (As pic 5)



(Pic 4)




(Pic 5)

**NOTE** If transceiver programmed as professional transceiver mode and locked,you can't return to amateur transceiver mode by manual operation from general setting.

**4. Under every mode, from No. 18-29 menu in general setting can be changed and saved.**


## ■ Switching the Power On/Off

according to the option selected during installation Press the **POW** switch or turn the ignition key to ACC (speed up) or ON (startup) position to power on radio . Press the **POW** key for 1s or turn the ignition key to OFF position to turn off.

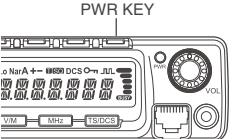

## ■ Adjusting The Volume

Turn the VOL knob clockwise to increase the audio level, counterclockwise to decrease.

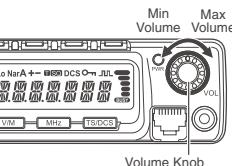


**NOTE** During communication, volume can be adjusted more accurate.

12


## ■ Switch between VFO and Channel mode

In standby, press **VFM** key or Microphone's **VFM** key until appear **M**, this indicates current channel in channel mode. Repeat above operation to switch between Frequency mode (VFO) and Channel mode.

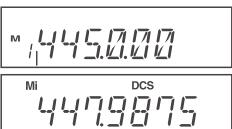

## ■ Adjusting Frequency/Channel through selector Knob

1. Under frequency (VFO) mode, you can change the current frequency to the desired one through selector knob; Turn clockwise to increase frequency; turn counterclockwise to decrease. Every gear will increase or decrease one step. Press **MHz** key, the decimal point of

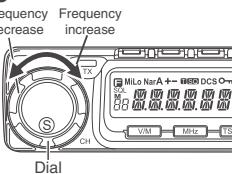


frequency in screen will be auto-hidden. In this status, turn selector knob or Microphone [ **UP** / **DOWN** ] key will increase or decrease frequency quickly by 1MHz step .

2.Under channel mode, you can change the current channel to the desired one through selector knob, clockwise turn to the forward channel, anticlockwise turn to the backward channel. In relative working mode, Microphone's [ **UP** / **DOWN** ] key has same function for adjusting frequency and channel.

**NOTE** 5k, 6.25k, 8.33K, 10k, 12.5k, 20k, 25k, 30k and 50k total nine step size available for this radio.

## ■ Receiving

 When the channel you are operating is called, the screen shows **BUSY** and field intensity, in this way, you can hear the calling from transmitting party.



**NOTE** If the transceiver has set at higher squelch level, it may fail to hear the calling.

When the channel you are operating is called, the screen shows **BUSY** and field intensity, you can't hear the calling from transmitting party, it means current channel receives a matching carrier but unmatched signaling(Refer to CTCSS/DCS encode and decode or Optional Signaling setup).

## ■ Transmitting

Press and hold **SQL** key or press MIC's **\*MON** key to monitor for a while to confirm the channel desired is not busy. Release **SQL** or press Mic's **\*MON** key to return standby status, Then press and hold **[PTT]** key to speak into microphone.

- ▼ Please hold the microphone approximately 2.5-5.0cm from your lips, and then speak into the microphone in your normal speaking voice to get best timbre.

 Press and hold [PTT] key, LED lights RED and power intensity showed in NOTE screen indicates it is transmitting, release to receive.

## ■ Transmitting Tone-Pulse

Press and hold [PTT] key, then press Microphone [ DOWN ] key to transmit current selected tone-pulse signal.

## ■ Transmitting optional signaling

Press and hold [PTT] key, then press Microphone [ UP ] key or press **CAL** key in front panel or press Mic's  key to transmit pre-stored and selected DTMF/2Tone/5Tone optional signaling.

## ■ Channel Edit

1. Under frequency mode (VFO), turn selector knob to select the desired frequency or input frequency by MIC's numeric keys.
2. Press **TS/DCS** key to enter CTCSS/DCS signaling setup, turn selector knob to select the desired signaling.
3. Press **FUN** key, LCD appears  ,  icon and current channel number,  icon flashing means current channel is empty.
4. Turn selector knob to select the desired channel number to store.
5. Press **V/M** key,  ,  icon and channel number disappears and emit a prompt voice, thus the channel storage succeed.

## ■ Channel Delete

1. Under channel mode, turn selector knob to select channel which you want to delete.
2. Press **FUN** key and **V/M** key together, current channel will be deleted and emitted a prompt voice.  icon flashing means current channel is deleted.



## Shortcut Operations

### Squelch OFF / Squelch OFF momentary

key programmed as Squelch Off or Squelch Off Momentary to monitor the weak signal.

1. Squelch Off: Press key to disable squelch ,press key again to resume squelch.
2. Squelch Off Momentary: Press and hold key to disable squelch,release key to resume squelch.



The above functions should be set in programming software.

### Squelch level Setup

Setting the radio to a tight squelch level,you can avoid unwanted signals or noise,but you may not receive a weak signal. Therefore,it will be better for you to select the normal squelch level.

14

1. While standby, press key and turn selector knob until LCD appears **SQL** and current squelch level
2. Turn selector knob or press MIC [ / ] key to set desired squelch level.
3. Press any key except and key to exit .

 


### Frequency/Channel Scan

#### Frequency Scan

In frequency (VFO) mode, this function is designed to monitor signal of every communicative frequency point of transceiver "step size" you have set.

1. In VFO mode,press for 1s to enter into frequency scan.



2. Turn selector knob or press Microphone [ / ] key to change scan direction.

3. Press any key except and key to exit.

### Channel Scan

In channel mode, this function is designed to monitor signal in every channel.

1. In channel mode,Press key for 1s to enter into channel scan
2. Turn selector knob or press Microphone [ / ] key to change scan direction.
3. Press any key except and key to exit.

 
 


### CTCSS/DCS Encode and Decode setup

Repeatedly press key to check whether set CTCSS/DCS encode and decode in current channel or not.



1. When LCD appears iron, it means current channel with CTCSS encode, turn selector knob or press Microphone's [ / ] key to select desired CTCSS encode.
2. When LCD appears and iron, it means current channel with CTCSS encode and decode, turn selector knob or press Microphone's [ / ] to select desired CTCSS code.



3. When LCD appears **DCS** iron, it means current channel can be set with DCS encode and decode together, turn selector knob or press Microphone's [ **UP** / **DOWM** ] to select desired DCS encode and decode.
4. CTCSS:62.5-254.1, Total 51groups; DCS:000N-777I total 1024 groups. N is positive code, I is inverse code.
5. Press any key except **FUN**, **POW** and **TS/DCS** keys to return into standby status.

 **NOTE** Under channel mode, this operation can be temporarily used by user. Once the radio is turned off or switched to another channel, the temporary setting will be erased.


## ■ CTCSS SCAN

 Repeatedly press **TS/DCS** key until LCD displays **T** and **SQ** icons, then hold **TS/DCS** key for 1S to enter into CTCSS scanning. Once finding a matching CTCSS signaling ,it will stop for 15s then scan again.



## ■ DCS SCAN


Repeatedly press **TS/DCS** key until LCD displays DCS icons ,then hold **TS/DCS** key for 1S to enter into DCS scanning. Once finding a matching DCS signaling ,it will stop for 15s then scan again.



## ■ HIGH/MID/LOW Power Switch

Press **FUN** key until LCD display **F** iron, then press **CAL** key to switch between high/Mid/low power. The LCD appears:

 **None**: Transmit in high power



**Mi**: Transmit in middle power



**Lo**: Transmit in low power



## ■ Comander (decrease the background noise and enhance audio clarity)

Comander function will decrease the background noise and enhance audio clarity, especially in long range communication.

1. Press **FUN** key, then press **SQL** key to turn on comander function, repeat above operation again to turn off comander function.
2. When LCD appears **JUL** iron, enable comander in current channel.
3. When LCD doesn't display **JUL** iron, disable comander in current channel.



## Offset direction and Offset Frequency setup

Repeater receives a signal(UP-LINK) on one frequency and retransmits on another frequency(DOWN-LINK). The difference between these two frequencies is called the offset frequency. If the UP-LINK frequency higher than DOWN-LINK frequency, the direction is positive, If it is lower, the shift direction is negative.

1. Press **[FUN]** key until the **F** icon displays on the LCD, then press **[MHz]** key, LCD displays offset direction and offset frequency.

-  
26.00

2. Repeatedly press **[MHz]** key to select positive offset and negative offset.

+-  
26.00

3. When LCD displays "+" icon, it indicates positive offset, which means transmitting frequency higher than receiving frequency.

4. When LCD displays "-" icon, it indicates negative offset, which means transmitting frequency lower than receiving frequency.

5. Turn selector knob or Mic's [ **UP** ] / **DOWN** ] key to change offset frequency, offset frequency changed as per stepping.

6. Press any key except **[FUN]** and **[MHz]** key to exit into standby.



**Under channel mode,**this operation can be temporarily used by user.

Once the radio is turned off or switched to another channel,the temporary setting will be erased.

## Keypad Lockout

Avoiding unintentional operation, this function will lock main keys, all keys except **[SQL]** , **[FUN]** and **[POW]** key are invalid.

1. Press **[FUN]** key until LCD displays **F** icon, then press **[TS/DCS]** key until, LCD displays **o-n** icon, it indicates keypad lockout function is valid.

444.0 125

2. Repeat above operation, **o-n** icon disappears, it indicates keypad lockout function is invalid.

## Current Voltage ENQUIRY

This function will display Current Battery Voltage.

1. Press and hold **[FUN]** key, then press **[SQL]** key, LCD displays current battery voltage.
2. Repeat above operation to return into VFO or Channel mode

13.7V

In voltage display mode, all functions and channel or frequency selection are invalid.

## Auto-Dialer Setup

This will automatically transmit pre-programmed and stored DTMF tones. And they are often used to remote control electronic devices or AUTOPATCH phone systems available on some repeater.

1. Press and hold **[FUN]** key, then press **[TS/DCS]** key to enter the auto-dialer enquiry mode, LCD displays current default data and current group displayed on left. If no data in current group,it shows"EMPTY".

2. Turn selector knob to choose group you desired. Total:16 group,01-16.
3. Press **[SQL]** key to enter into editing of current group,press MIC's numeric keys to set your desired data.
4. The display scrolls when the 7th digit is entered. The numbers 0-9, --, A-D, \* and # can be stored up to a total of 23 digits.
5. After editing,press PTT or **[CAL]** key to send current group and store edited DTMF signaling. Press **[SQL]** to exit and store.

01 EMPTY

01 --- 123

01 123

### ■ Transmitting Edited DTMF tones in the Auto-dialer memory

1. Press **[FNC]** key, then press **[TSDCS]** key to enter into auto-dialer enquiry
2. Turn selector knob to select desired transmitting group
3. Press PTT or **[CAL]** key to transmit current selected DTMF tones.

1. Press and hold [FUN] key for over 2s to enter general setting menu.
2. Press [CAL] or [SQL] to select the desired function option.
3. Turn selector knob to select the desired setup.
4. Press [TS/DCS] to confirm and exit.

Meanwhile, if you want to edit channel name or start up menu, press [VM] or [TS/DCS] to move forward or backward, Press [MHz] to store and exit.

 In Profession transceiver mode, the functions from No.1 to No.17 will be auto-hidden.  
**NOTE**

## Frequency Channel Step Setup

Only in frequency (VFO) mode, this function is valid. Turn selector knob to select frequency or frequency scanning which is restricted by frequency step size.

1. Press and hold [FUN] key for over 2s to enter general setting menu.
2. Press [CAL]/[SQL] key to choose No.01 menu, LCD displays iSTP--125
3. Turn selector knob to select the desired frequency channel step. Channel step: 5K, 6.25K, 8.33K, 10K, 12.5K, 20K, 25K, 30K and 50K, total 9 kinds.
4. Press [TS/DCS] key to confirm and exit

 This function is auto-hidden in channel mode.  
**NOTE**

## DTMF, DTMF ANI, 2-Tone or 5-Tone signaling

DTMF/5Tone/2Tone signalling function as similarly as CTCSS/DCS. Without receiving correspondent tone signalling, the speaker will remain mute. DTMF and 5Tone signalling can be applied for other advanced

features such as ANI, PTT ID, group call, remotely stun, remotely kill, waken,...etc. The signalling edition must be done through programming software. Please refer to the HELP option in the programming software to know how to operate these features.

1. Press and hold [FUN] key for over 2s to enter into general setting menu.
  2. Press [CAL]/[SQL] to choose No 2 menu, LCD displays "T-OFF".
  3. Turn selector knob to select the desired setup.
- "DTMF": the channel will be mute by a DTMF signal. The speaker won't be open until receiving a correspondent DTMF signal. Hold "PTT" then press [UP] or press [CAL] directly to transmit the pre-stored DTMF signaling.

 In DTMF signalling mode, press [CAL] for 2s until LCD displays "AN---", turn selector knob to select desired digit (the other party ID). In this mode, press [TS/DCS] to confirm exist digit and move cursor to next, press [VM] to forward cursor. After editing, press [CAL] key to operate ANI call.

"2TONE": the channel will be mute by a 2-Tone signal. The speaker won't be open until receiving a correspondent 2-Tone signal. Hold iPTT then press [UP] or press [CAL] directly to transmit the pre-stored 2-Tone signaling.

"5Tone": the channel will be mute by a 5-Tone signal. The Speaker won't be open until receiving a correspondent 5-Tone signal. hold iPTT then press [UP] or

02 T - DTMF

02 T - 2TONE

02 T - 5TONE

Press **CAL** directly to transmit the pre-stored 5-Tone signaling.



In 5Tone signaling mode,press **CAL** for 2s until LCD displays "AN---",turn selector knob to select desired digit(caller ID).In this mode,press **TS/DCS** to confirm exist digit and move cursor to next,press **V/M** to forward cursor.After editing,press **CAL** key to operate ANI call.

4. Press **TS/DCS** key to confirm and exit

## Sending 2-Tone Call

1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL** / **SQL** key to choose  
No.03 menu, LCD displays "2TON XX","XX"indicates the group in the list.
3. Turn selector knob to select the desired sending 2TONE group,Press PTT to transmit selected group.
4. Total:32groups,00-31,Default:00.
5. Press **TS/DCS** key to confirm and exit.

**03 2 TON - 00**

Content and name of 2TONE will be edited by programming software.  
**NOTE** This radio only query edited group or name.If there is corresponding name for 2TONE,this operation will display 2TONE corresponding name.

## Sending 5-Tone Call

1. Press and hold **FUN** key for over 2s to enter general setting menu

2. Press **CAL** / **SQL** key to choose

No.04 menu, LCD displays "5TON XX","XX"indicates the group in the list.

3. Turn selector knob to select the desired sending 5TONE group,Press PTT to transmit selected group.
4. Total:100groups,00-99,Default:00.
5. Press **TS/DCS** key to confirm and exit.

**04 5 TON - 00**

Content and name of 5TONE will be edited by programming software.This radio only query edited group or name.If there is **NOTE**corresponding name for 5TONE,this operation will display 5TONE corresponding name.

## Sending DTMF call

1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL** / **SQL** key to choose  
No.05 menu, LCD displays "DTMF XX","XX"indicates the group in the list.
3. Turn selector knob to select the desired sending DTMF group,Press PTT to transmit selected group.
4. Total:16groups,00-16,Default:00.
5. Press **TS/DCS** key to confirm and exit.

**05 DTMF - 01**

## Signaling Combination setup

This function is to improve the level of protecting the radio against receiving irrelative signal.

1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL** / **SQL** key to choose No.06 menu, LCD displays "SPK--SQ".
3. Turn selector knob to select the desired combination

If select "SQ", it indicates you can hear the calling from caller when receive a matching carrier.

If LCD displays "CTC", it indicates you can hear the calling from caller when receive a matching carrier and CTCSS/DCS signaling .

If LCD displays "TON", it indicates you can hear the calling from caller when receive a matching carrier and DTMF/2TONE/5TONE signaling .

 
 
 
If LCD displays "C/T", it indicates you can hear the calling from caller when receive a matching carrier and either CTCSS/DCS DTMF/2TONE/5TONE signaling .

If LCD displays "C/T", it indicates you can hear the calling from caller when receive a matching carrier and either CTCSS/DCS DTMF/2TONE/5TONE signaling .

4. Press **TS/DCS** key to confirm and exit






This setting will be set together with adding optional signaling and CTCSS/DCS.



## HIGH/MID/LOW Selection

  
 
1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL** / **SQL** key to choose No.07 menu, LCD displays iPOW-HIi.
3. Turn selector knob to select the desired setting.  
HI: High TX Power  
MI : Middle TX Power  
LOW: Low TX Power
4. Press **TS/DCS** key to confirm and exit.



## Band-width Selection

Select suitable bandwidth in accordance with different local conditions.

  1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL** / **SQL** key to choose No.08 menu, LCD displays "BAND-25".
3. Turn selector knob to select the desired setting.  
25: band width is 25k(Wide band)  
20: band width is 20k(Middle band)  
12:band width is 12.5k(Narrow band)
4. Press **TS/DCS** key to confirm and exit.
5. Default:25(Wide Band).



## ■ TX OFF Setup

Disable this function,it is invalid to press PTT,current channel only works in RX mode.

1. Press and hold **[FUN]** key for over 2s to enter general setting menu.
2. Press **[CAL]/[SQL]** key to choose No.09 menu, LCD displays "TX-ON".
3. Turn selector knob to select the desired setting .  
On:In current channel,Press PTT to transmit  
OFF:In current channel,Press PTT is invalid.
4. Press **[TS/DCS]** key to confirm and exit.Default:ON.

09 TX - ON

09 TX - OFF

## ■ Busy Channel Lockout

BCLO is to disable transmitting while RX signal is received. Once the channel is busy and you press PTT, the radio will beep as warning and get back to receiving.

1. Press and hold **[FUN]** key for over 2s to enter general setting menu
2. Press **[CAL]/[SQL]** key to choose No.10 menu, LCD displays "LOCK--OFF".
3. Turn selector knob to select the desired setting.

LOCK - BU

LOCK - RL

LOCK - OF

BU: Enable BCLO, Carrier lockout, transmitting is inhibited when current channel receives a matching carrier;press [PTT] to emit error voice prompt and back to receiving status.

RL: Enable BTLO, transmitting is inhibited when current channel receives a matching carrier but dis-matching CTCSS/DCS.press [PTT] to emit error voice prompt and back to receiving status.

OFF: Busy channel lockout is disabled.It can transmit in any receiving status.

4. Press **[TS/DCS]** key to confirm and exit.

## ■ Editing Channel Name

1. Press and hold **[FUN]** key for over 2s to enter general setting menu.
2. Press **[CAL]/[SQL]** key to choose No.11 menu, LCD displays cursor and flashing.
3. Turn selector knob to select the desired letter,press **[TS/DCS]** key to confirm selected letter and enter into next edition,Press **[V/M]** to return forward edition.
4. After edition,press **[MHz]** key to exit.

HU\_

21

 **NOTE** In Frequency (VFO) mode ,this function will be auto-hidden.

## ■ Reverse TX/RX

TX frequency turns to RX frequency & RX frequency changes to TX frequency. The signaling will also be reversed if CTCSS/DCS signaling exited in this channel.

1. Press and hold **[FUN]** key for over 2s to enter general setting menu

## General Setting

 
- Press **CAL** / **SQL** key to choose No.12 menu, LCD displays "REV--OF".

- Turn selector knob to select the desired setting.

ON:Enable Frequency Reverse

OFF:Disable Frequency Reverse.

- After edition,press **TS/DCS** key to exit.




- Press **CAL** / **SQL** key to choose No.14 menu, LCD displays "COMP--OFF".

- Turn selector knob to select the desired setting.

ON:Enable compander

OFF:Disable compander

 - Press **TS/DCS** key to confirm and exit.Default:OFF



## Talk Around

By Talk Around function,you can directly communicate with other radios in your group in case the repeater is not activated or when you are out of the repeater range. The transceiver will transmit by RX frequency with its CTCSS/DCS signaling.

22

- Press and hold **FUN** key for over 2s to enter general setting menu.

 
 
- Press **CAL** / **SQL** key to choose No.13 menu, LCD displays "TALK--OF".

- Turn selector knob to select the desired setting.

ON:Enable Talk Around

OFF:Disable Talk Around

- After edition,press **TS/DCS** key to exit.



## Scrambler setup (Encryption)

An analog voice inversion scrambler can be equipped as optionals.This special audio process can offer a more confidential communication.Other radios at same frequency will receive only disordered noises.

- Press and hold **FUN** key for over 2s to enter general setting menu.

- Press **CAL** / **SQL** key to choose No.15 menu, LCD displays "SCR--OF".

- Turn selector knob to select the desired setting.

ON:Enable Scrambler

OF:Disable Scrambler

- Press **TS/DCS** key to confirm and exit.Default:OFF



**NOTE** This function is optional

## Voice Comander

Enable this function to reduce background noise and enhance audio clarity, especially in long range communication.

- Press and hold **FUN** key for over 2s to enter general setting menu

## Radio's DTMF self ID enquiry

- Press and hold **FUN** key for over 2s to enter general setting menu.

- Press **CAL** / **SQL** key to choose No.16

 


menu, LCD displays "D--XXX" XXX is radio's DTMF SELF ID.

3. Press **TS/DCS** key to confirm and exit.

## ■ Radio's 5TONE self ID enquiry



1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL**/**SQL** key to choose No.17 menu, LCD displays "F--XXXXX", "XXXXX" is radio's 5TONE SELF ID.
3. Press **TS/DCS** key to confirm and exit.



## ■ Voice Prompt

The prompting tone provides confirmation of entry, error status or malfunctions of the transceiver. You can enable or disable this function.

 1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL**/**SQL** key to choose No.18 menu, LCD displays "BEEP--ON".
3. Turn selector knob to select the desired setting.  
ON:Enable voice prompt  
OFF:Disable voice prompt
4. Press **TS/DCS** key to confirm and exit.Default:ON.

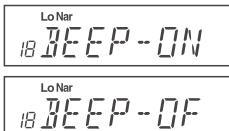

Suggestion:Enable this function to check incorrect operation and  
**NOTE** malfunctions.

## ■ TOT (Time-out timer)

The time-out timer limits the amount of transmitting time. When you reach the time limit which has been programmed by your dealer, your transmission will be cut off. In order to transmit again, you must release PTT button to reset the timer.

 
 
1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL**/**SQL** key to choose No.19 menu, LCD displays "TOT--3"
3. Turn selector knob to select the desired setting.  
Timer:1-30min,each level 1min  
OFF:Disable TOT
4. Press **TS/DCS** key to confirm and exit.Default:3.



## ■ APO (Auto power off)

Once APO is activated, the radio will be automatically switched off when the pre-set timer is running to end.

1. Press and hold **FUN** key for over 2s to enter general setting menu.
2. Press **CAL**/**SQL** key to choose No.20 menu, LCD displays "APO--OFF".
3. Turn selector knob to select the desired setting.  
30MIN:Auto power off after 30m



1HOUR:Auto power off after 1h


2HOUR:Auto power off after 2h

OFF:Disable Auto power off

4. Press **TS/DOS** key to confirm and exit.Default:OFF

## ■ DTMF Transmitting Time

 1. Press and hold **FUN** key for over 2s to enter general setting.



2. Press **CAL** / **SQL** key to choose No.21 menu, LCD displays"SPD--50".

3. Turn selector knob to select the desired setting.

30/50/100/200/300/500, which indicates the time for sending each DTMF signal & the interval between each DTMF being sent.


4. Press **TS/DOS** key to confirm and exit.Default:50MS.

24

## ■ Squelch level Setup

 Setting the radio to a tight squelch level, you can avoid unwanted signals or noise, but you may not receive a weak signal. Therefore, it will be better for you to select the normal squelch level

1. Press and hold **FUN** key for over 2s to enter general setting menu.



2. Press **CAL** / **SQL** key to choose No.22 menu, LCD displays"SQL--04".

3. Turn selector knob to select the desired squelch level.

OF-20 total 21,OF is min setting value(ON)


4. Press **TS/DOS** key to confirm and exit.Default:04

Press **SQL**,then turn selector knob also can select the desired squelch level.  
**NOTE** If the transceiver has set at higher squelch level,it may fail to hear the calling.If set at lower squelch level,the radio will be interfered.


## ■ Scan Dwell Time Setup

 There are 3 kinds of Scan Dwell Time for option.


1. Press and hold **FUN** key for over 2s to enter general setting menu.



 2. Press **CAL** / **SQL** key to choose No.23 menu, LCD displays"SCAN--TO".



 3. Turn selector knob to select the desired Scan Dwell Time.



TO:it pauses 15s once scanning a matching signal,then resume scan.

CO:it pauses once scanning a matching signal,signal disappeared then resume scan.

SE:It stops once scanning a matching signal.

4. Press **TS/DOS** key to confirm the selection and exit.Default:TO.

## ■ LCD Backlight

1. Press and hold **FUN** key for over 2s to enter general setting menu.



2. Press **CAL** / **SQL** key to choose No.24

menu, LCD displays "LAMP--25"

3. Turn selector knob to select the desired LCD backlight brightness 1-32 total 32 level backlight brightness.
4. Press **TS/DCS** key to confirm and exit.Default:25.

## Pilot Frequency

This function uses to start repeater .It needs a certain intensity Pilot Frequency to start dormant repeater.As usual,no need to send pilot frequency again once repeater started.

1. Press and hold **FUN** key for over 2s to enter general setting.

2. Press **CAL** / **SQL** key to choose No.25 menu, LCD displays "TB--1750".

3. Turn selector knob to select the desired pilot frequency.


1750HZ:Pilot frequency 1750HZ

2100HZ:Pilot frequency 2100HZ

1000HZ:Pilot frequency 1000HZ

1450HZ:Pilot frequency 1450HZ

4. Press **TS/DCS** key to confirm the selection and exit.Default:1750HZ

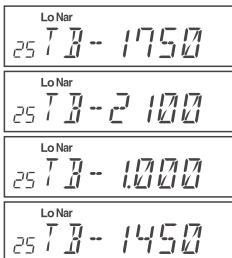

2. Press **CAL** / **SQL** key to choose No.26 menu, LCD displays "DSP--FR".

3. Turn selector knob to select the desired mode.

FR:Frequency+Channel mode( Amateur transceiver mode).

CH:Channel mode( Professional transceiver mode).

NM:Channel+Name Tag mode( Amateur transceiver mode),if channel not named,it displays Frequency+Channel mode.

4. Press **TS/DCS** key to confirm and exit.Default:FR.

This function will be auto-hidden if channel mode locked.(Refer to NOTE programming software)

25

## PIN Setup

Enable this function,you have to insert a matching PIN to enter into normal status when radio is turned on.(Pin setup by programme software).

1. Press and hold **FUN** key for over 2s to enter general setting menu.


2. Press **CAL** / **SQL** key to choose No.27 menu, LCD displays "CODE-OF".

3. Turn selector knob to enable/disable Pin setup.

ON: Turn on Pin setup

OFF:Turn off Pin setup

4. Press **TS/DCS** key to confirm and exit.Default:OFF

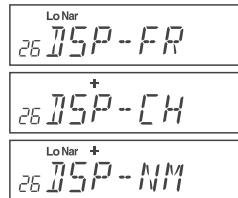

### Address list

You store desired ID and corresponding ID name in address list. The LCD displays ID corresponding name if radio received ANI calling and find matching ID in address list.

1. Press and hold **FUN** key for over 2s to enter general setting menu.

2. Press **CAL** / **SQL** key to choose No.28 menu, LCD displays "BOOK".

28 BOOK

3. Press **MHz** to enter into ID setting, press **CAL** / **SQL** to select the desired group (00-127, total is 128 group ID). Turn selector knob to select desired number, press **TS/DCS** confirm and move cursor to next edition, press **V/M** to clear out all digits.

127 + 135 --

4. After finishing edition, press **MHz** to confirm and enter into edition of current group's ID corresponding name. Turn selector knob to select desired letter, press **TS/DCS** to move cursor to next edition, Press **V/M** to clear out all letters. 00-127, total 128 group ID and corresponding ID name.

127 JHONSON

5. Press **MHz** to confirm and return into main menu. Repeat above Step 3 and Step 4 operations to edit multi-ID and corresponding ID name.

6. Press **TS/DCS** key to return into standby status.

1. Press and hold **FUN** key for over 2s to enter general setting menu.

2. Press **CAL** / **SQL** key to choose No.29 menu, LCD displays "RESTORE".

+  
29 RESTORE

3. Turn selector knob to select the desired operation.

FACT: Resume factory default for channel, signaling and general setting.

+  
29 FACT


SETUP: Return initial setup for No.18-No 27 general setting menu.

+  
29 SETUP

4. Press **MHz** key to confirm.

### Factory Default

If your radio seems to be malfunctioning, resetting the microprocessor may solve the problem. When performing the reset, you may lose memory data and stored information. Back up or write down important data before performing the reset.

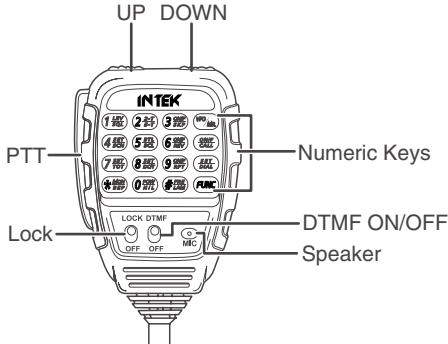

You can operate the transceiver by keypad or input desired frequency or channel through the QHM-03 microphone (Note: In professional transceiver mode, other keys are invalid except PTT, [UP] / [DOWN], [SEND] and [SET]).

#### Keypad Lock

Pull down the slide switch to lock position, The lamp is turned off and all of keypads is not work except PTT switch.

#### Transmitting DTMF By Microphone Keypad

Slide DTMF key to DTMF position, press and hold the [PTT] key, transmitting the desired DTMF signaling by the numeric key directly. (Note: Slide DTMF key to DTMF position, the keyboard is invalid in standby).

#### Function Setup By Microphone Keypad

Squelch off: In standby, press [MONITOR] key, the squelch is disabled when [BUSY] icon flashed in LCD, Press [MONITOR] again to enable squelch and the [BUSY] icon disappears.

444.0 125

#### Switches between VFO and channel mode

In standby, press [VFO/MODE] key to switch between channel mode and Frequency mode (VFO).

#### Short Calling

In standby, press [ONE CALL] to transmit the selected DTMF/2TONE/5TONE in current channel.

Transmitting DTMF Code: In standby, press [SET DIAL], LCD displays DTMF data and group. Press [UP] / [DOWN] key to select the desired transmitting DTMF group, then Press PTT to transmit.

If no DTMF data in current group, LCD displays "EMPTY", press [SET DIAL] key again and input desired DTMF code by keypad, press PTT to transmit and store DTMF data.

#### Squelch Level

1. In standby, press [FUNC], then press [LEV SEL], LCD displays "SQL" and current squelch level.
2. Press [UP] / [DOWN] to adjust the desired squelch level. (press [FUNC], then press [LEV SEL], turn selector knob also can adjust the desired squelch level).
3. Press number key to confirm and exit.

#### Optional signaling

In standby, press [FUNC], then press [2BT] to add optional signaling, repeat above operation to set DTMF, 2TONE or 5TONE signaling.

When first bit of Exa byte in frequency displays "D", it indicates DTMF function enable.

When first bit of Exa byte in frequency displays "T", it indicates 2Tone function enable.

444.0 125

444.0 125

F44.0 125

When first bit of Exa byte in frequency displays "F", it indicates 5Tone function enable.



This function can be temporarily used in channel mode. Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.

## Scan Skip

In Channel mode, press **[FUNC]** then press **[3]**, decimal point displayed between frequency's ten digit and unit digit, it means current channel is scan skip. Repeat above operation to set scan or scan skip in current channel.

1. decimal point displayed between frequency's ten digit and unit digit, it means current channel is scanned skip.
2. decimal point is not displayed between frequency's ten digit and unit digit, it means current channel is scanned.

28

## Frequency/Channel scan

In corresponding mode, press **[FUNC]** then press **[4]** key to enter into scanning.

In scanning mode, press **[UP]** / **[DOWN]** to change scan direction.

## Busy Channel Lockout

BCLO is to disable transmitting while RX signal is received. Once the channel is busy and you press PTT, the radio will beep as warning and get back to receiving.

1. In standby, press **[FUNC]**, then press **[5]** to enter into Busy Channel Lockout.
2. Press **[UP]** / **[DOWN]** to select the desired value.

**BU:** Enable BCLO, Carrier lockout, transmitting is inhibited when current channel receives a matching carrier; press [PTT] to emit error voice prompt.

**RL:** Enable BTLO, transmitting is inhibited when current channel receives a matching carrier but dis-matching CTCSS/DCS. press [PTT] to emit error voice prompt. It can transmit in any receiving status.

**OFF:** Busy channel lockout is disabled.

 
3. Press number keys to confirm and exit.



This function can be temporarily used in Channel mode. Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.

## Reverse TX/RX

TX frequency turns to RX frequency & RX frequency changes to TX frequency. The signaling will also be reversed if CTCSS/DCS signaling exited in this channel.



1. In standby, press **[FUNC]**, then press **[6]**, LCD displays iREV6OF.

2. Press **[UP]** / **[DOWN]** to select the desired value.

**ON:** Enable Frequency Reverse

**OFF:** Disable Frequency Reverse

3. Press number keys to confirm and exit.



This function can be temporarily used in Channel mode. Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.

## TOT (Time-out timer)

The time-out timer limits the amount of transmitting time. When you reach the time limit which has been programmed by your dealer, your transmission will be cut off. In order to transmit again, you must release PTT button to reset the timer.

1. In standby, press **FUNC**, then press **7 TOT**. LCD displays "TOT-X".
2. Press [**UP** / **DOWN**] to select the desired value.
3. Press number key to confirm and exit.

## CTCSS/DCS Encode and Decode

1. In standby, press **FUNC**, then press **8 C/SET** to enter into CTCSS/DCS Encode and Decode.
2. Repeat above operation to set as below:
  - LCD displays T icon, it indicates CTCSS encode set in current channel.
  - LCD displays T and SQ icon, it indicates CTCSS encode and decode set in current channel.
  - LCD displays DCS icon, it indicates DCS encode and decode set in current channel.
3. In corresponding icon, press [**UP** / **DOWN**] to select the desired CTCSS/DCS encode and decode.
4. Press **\*NON-BEEP** / **V/M**, or C/SET to confirm and exit.

 This function can be temporarily used in Channel mode. Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.

## Talk Around

By Talk Around function, you can directly communicate with other radios in your group in case the repeater is not activated or when you are out of the repeater range. The transceiver will transmit by RX frequency with its CTCSS/DCS signaling.

1. In standby, press **FUNC**, then press **9 ONE RPT** key, LCD displays "TALK--OF".
2. Press [**UP** / **DOWN**] to select the desired setting .
  - ON:Enable Talk Around
  - OFF:Disable Talk Around
3. Press number key to confirm and exit.

 This function can be temporarily used in Channel mode . Once the radio is turned off or switched to another channel, the temporary setting will be erased and back to initial settings.

29

## Voice Prompt

The prompting tone provides confirmation of entry, error status or malfunctions of the transceiver. You can enable or disable this function.

1. In standby, press **FUNC**, then press **\*NON-BEEP**, LCD displays "BEEP--XX".
2. Press [**UP** / **DOWN**] to turn on/off BEEP voice prompt.
  - BEEP OFF :turn off voice prompt
  - BEEP ON :turn on voice prompt
3. Press number key to exit and store.

## HIGH/MID/LOW Power selection

1. In standby, press **FUNC**, then press **0 POW**, LCD displays "POW-XX".
2. Press [**UP** / **DOWN**] to select the desired power.

HI:High Power

MI:Middle Power

LOW:Low Power

3. Press number keys to exit and store.

## ■ LCD Backlight

1. In standby status, press **[FUNC]**, then press **[#FIRE]** LCD displays "LAMP-XX".
2. Press [**UP** / **DOWN**] to select desired backlight brightness(1-32 levels).
3. Press number keys to confirm and exit.


Download the free PC programming software from [www.intek-radios.com](http://www.intek-radios.com) then follow the installing instruction.

## ■ Install USB Cable Driver Program

1. Click start menu in computer, under "ALL PROGRAMS" menu, choose and click "USB To Com port" on INTEK program, install "USB To Com port" driver by indication.
2. Connect the optional USB Programming cable to USB port on PC and connect the transceiver (see pic 1).
3. Double click on PC software shortcut or click the related icon in the start menu, choose serial com port as indicated then click OK to start programming software.
4. According to instruction, select correct "COM Port", then click OK to start programming software.

**Note:** Even in same computer, the selective COM Port is different when USB cable connects with different USB port.

You shall install software before connecting the USB cable line. Switch on transceiver before writing frequency. You had better not switch on or off the power supply of transceiver when it is connected with computer, otherwise, it will make transceiver unable to read or write frequency. In this case, you have to turn off programming software, pull out USB cable, then reinsert USB cable and open software, then rechoose COM Port, it will turn into normal operation. Therefore, please connect transceiver with computer after switching on the transceiver. Don't restart transceiver power when it is connected with computer.

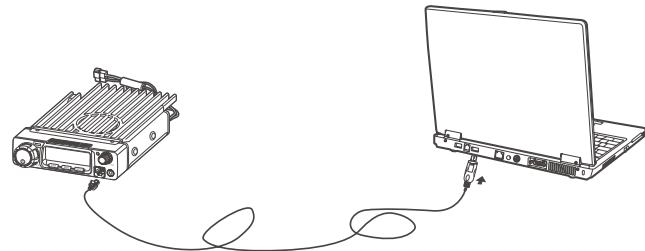

(pic 1)



**NOTE** This software has product identify system, so when firstly installing the software, you have to connect the products, otherwise you can not start the software.

### Default Setting after Resetting (VHF)

		DCS encode and decode	-
VFO frequency	145.00MHz	DCS code	023N
Memory channel 0-199	-	Output power	HI
Offset direction	-	Key-lock setting	OFF
Offset frequency	600KHz	TOT	OFF
Channel step	12.5KHz	APO	OFF
CTCSS encode and decode	-	Squelch Level	4
CTCSS frequency	88.5Hz		

### Default Setting after Resetting (UHF)

		DCS encode and decode	-
VFO frequency	435.00MHz	DCS code	023N
Memory channel 0-199	-	Output power	HI
Offset direction	-	Key-lock setting	OFF
Offset frequency	5MHz	TOT	OFF
Channel step	25KHz	APO	OFF
CTCSS encode and decode	-	Squelch Level	4
CTCSS tone frequency	88.5Hz		

### Trouble Shooting

Problem	Possible Causes and Potential Solutions
(a) Power is on, nothing appears on Display.	+ and - polarities of power connection are reversed. Connect red lead to plus terminal and black lead to minus terminal of DC power supply.
(b) Fuse is blown.	Check and solve problem resulting in blown fuse and replace fuse with new fuse.
(c) Display is too dim.	Dimmer setting is "LAMP-L". Please make the dimmer setting "LAMP-H".
(d) No sound comes from speaker.	- Squelch is muted. Decrease squelch level. - Tone or CTCSS/DCS squelch is active. Turn CTCSS or DCS squelch off.
(e) Key and Dial do not function.	Key-lock function is activated. Cancel Key-lock function.
(i) Rotating Dial will not change memory channel.	Transceiver is in CALL mode. Press the VFO or memory mode.
(g) PTT key is pressed but transmission does not occur.	- Microphone connection is poor. Connect microphone properly. - Antenna connection is poor. Connect antenna properly.

## SPECIFICATIONS

### General

Frequency	VHF 144-145.9975 MHz (136-174 MHz) (*) (HR-200S) UHF 430-439.9950 MHz (400-490 MHz) (*) (HR-400S)
Channels	200
Channel spacing	25 KHz (Wide) / 20 KHz (Middle) / 12.5 KHz (Narrow)
Frequency Step	5 / 6.25 / 8.33 / 10 / 12.5 / 15 / 20 / 25 / 30 / 50 KHz
DC input voltage	13.8 VDC +/- 15%
Frequency Stability	+/- 2.5 ppm
Current Drain	15A max.
Operating temperature	-20/+60°
Dimensions	145 (W) x 47 (H) x 190 (L) mm
Weight	1.2 kg.

### Receiver

Sensitivity (12dB Sinad)	≤ 0.25 µV (Wide) / ≤ 0.35 µV (Narrow)
Selectivity	70 dB (Wide) / 60 dB (Narrow)
Intermodulation	>65dB (Wide) / >60dB (Narrow)
Audio output	2W

### Transmitter

RF output power	60W / 25W / 10W (VHF) (HR-200S) 45W / 25W / 10W (UHF) (HR-400S)
Modulation	FM
Spurious & Harmonics	in compliance with the R&TTE regulations
Distortion	≤ 5 %

(\*) HR-200EX (INTERNATIONAL VERSION) 136-173.9975 MHz (not available for Europe)

(\*) HR-400EX (INTERNATIONAL VERSION) 400-489.9950 MHz (not available for Europe)

**■ 50 groups CTCSS Tone Frequency (Hz)**

67.0	79.7	94.8	110.9	131.8	156.7	171.3	186.2	203.5	229.1
69.3	82.5	97.4	114.8	136.5	159.8	173.8	189.9	206.5	233.6
71.9	85.4	100.0	118.8	141.3	162.2	177.3	192.8	210.7	241.8
74.4	88.5	103.5	123.0	146.2	165.5	179.9	196.6	218.1	250.3
77.0	91.5	107.2	127.3	151.4	167.9	183.5	199.5	225.7	254.1

**■ 1024 groups DCS Code**

000	001	002	003	004	005	006	007
010	011	012	013	014	015	016	017
020	021	022	023	024	025	026	027
030	031	032	033	034	035	036	037
040	041	042	043	044	045	046	047
050	051	052	053	054	055	056	057
060	061	062	063	064	065	066	067
070	071	072	073	074	075	076	077
100	101	102	103	104	105	106	107
110	111	112	113	114	115	116	117
120	121	122	123	124	125	126	127
130	131	132	133	134	135	136	137
140	141	142	143	144	145	146	147
150	151	152	153	154	155	156	157
160	161	162	163	164	165	166	167
170	171	172	173	174	175	176	177
200	201	202	203	204	205	206	207
210	211	212	213	214	215	216	217
220	221	222	223	224	225	226	227
230	231	232	233	234	235	236	237
240	241	242	243	244	245	246	247
250	251	252	253	254	255	256	257
260	261	262	263	264	265	266	267
270	271	272	273	274	275	276	277
300	301	302	303	304	305	306	307
310	311	312	313	314	315	316	317

320	321	322	323	324	325	326	327
330	331	332	333	334	335	336	337
340	341	342	343	344	345	346	347
350	351	352	353	354	355	356	357
360	361	362	363	364	365	366	367
370	371	372	373	374	375	376	377
400	401	402	403	404	405	406	407
410	411	412	413	414	415	416	417
420	421	422	423	424	425	426	427
430	431	432	433	434	435	436	437
440	441	442	443	444	445	446	447
450	451	452	453	454	455	456	457
460	461	462	463	464	465	466	467
470	471	472	473	474	475	476	477
500	501	502	503	504	505	506	507
510	511	512	513	514	515	516	517
520	521	522	523	524	525	526	527
530	531	532	533	534	535	536	537
540	541	542	543	544	545	546	547
550	551	552	553	554	555	556	557
560	561	562	563	564	565	566	567
570	571	572	573	574	575	576	577
600	601	602	603	604	605	606	607
610	611	612	613	614	615	616	617
620	621	622	623	624	625	626	627
630	631	632	633	634	635	636	637
640	641	642	643	644	645	646	347
650	651	652	653	654	655	656	657
660	661	662	663	664	665	666	667
670	671	672	673	674	675	676	677

700	701	702	703	704	705	706	707
710	711	712	713	714	715	716	717
720	721	722	723	724	725	726	727
730	731	732	733	734	735	736	737
740	741	742	743	744	745	746	747
750	751	752	753	754	755	756	757
760	761	762	763	764	765	766	767
770	771	772	773	774	775	776	777

NOTE N is positive code, I is negative code, total: 232groups.

**Declaration of Conformity HR-200S**

EC Certificate of Conformity  
(to EC Directive 2006/95, 2004/108, 99/5)

**DECLARATION OF CONFORMITY**

With the present declaration, we certify that the following products :

**INTEK HR-200S**

comply with all the technical regulations applicable to the above mentioned products in accordance with the EC Directives 2006/95/EC, 2004/108/EC, 99/5/EC.

**Type of product :** Amateur Radio Equipment VHF

**Details of applied standards :**  
EN 300 086-1, EN 300-086-2  
EN 301 489-1, EN 301 489-5  
EN 60950-1

**Manufacturer :**  
**INTEK S.R.L.**  
Via G. Marconi, 16  
20090 Segrate, Italy  
Tel. 39-02-26950451 / Fax. 39-02-26952185  
E-mail : intek.com@intek-com.it

**Notified Body :**  
EMCCert Dr. Rasek  
Boelwiese 5, 91320 Ebermannstadt  
Germany  
Identification Number : 0678

**Contact Reference :**  
Armando Zanni  
Tel. 39-02-26950451 / Fax. 39-02-26952185  
E-mail : intek.com@intek-com.it

Segrate, 11-04-2012

dr. Vittorio Zanetti

(C.E.O.)  


**Declaration of Conformity HR-400S**

EC Certificate of Conformity  
(to EC Directive 2006/95, 2004/108, 99/5)

**DECLARATION OF CONFORMITY**

With the present declaration, we certify that the following products :

**INTEK HR-400S**

comply with all the technical regulations applicable to the above mentioned products in accordance with the EC Directives 2006/95/EC, 2004/108/EC, 99/5/EC.

**Type of product :** Amateur Radio Equipment UHF

**Details of applied standards :**  
EN 300 086-1, EN 300-086-2  
EN 301 489-1, EN 301 489-5  
EN 60950-1

**Manufacturer :**  
**INTEK S.R.L.**  
Via G. Marconi, 16  
20090 Segrate, Italy  
Tel. 39-02-26950451 / Fax. 39-02-26952185  
E-mail : intek.com@intek-com.it

**Notified Body :**  
EMCCert Dr. Rasek  
Boelwiese 5, 91320 Ebermannstadt  
Germany  
Identification Number : 0678

**Contact Reference :**  
Armando Zanni  
Tel. 39-02-26950451 / Fax. 39-02-26952185  
E-mail : intek.com@intek-com.it

Segrate, 11-04-2012

dr. Vittorio Zanetti

(C.E.O.)  




**INTEK**  
®